


INSTALLATION INSTRUCTIONS FOR WMA SERIES


**** Installation of these products should only be performed by a qualified electrician. ****

1. Lay the fixture on its back with the front housing facing up. Remove the front housing from fixture channel by grasping end caps and pulling upward to disengage it from spring mounting clips (A).

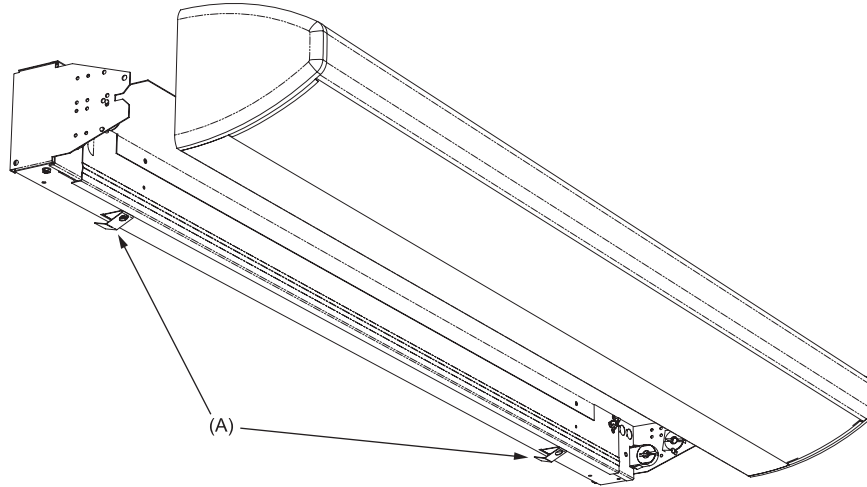

2. Remove wireway cover from fixture channel by rotating 1/4-turn fastener (B) (located on one end) 90° and slide it (C) until cover edge disengages from the socket bracket on the opposite end.

NOTE: When the fixture is equipped with the optional lamp divider it must be removed from the wireway cover via the two steel mounting screws.

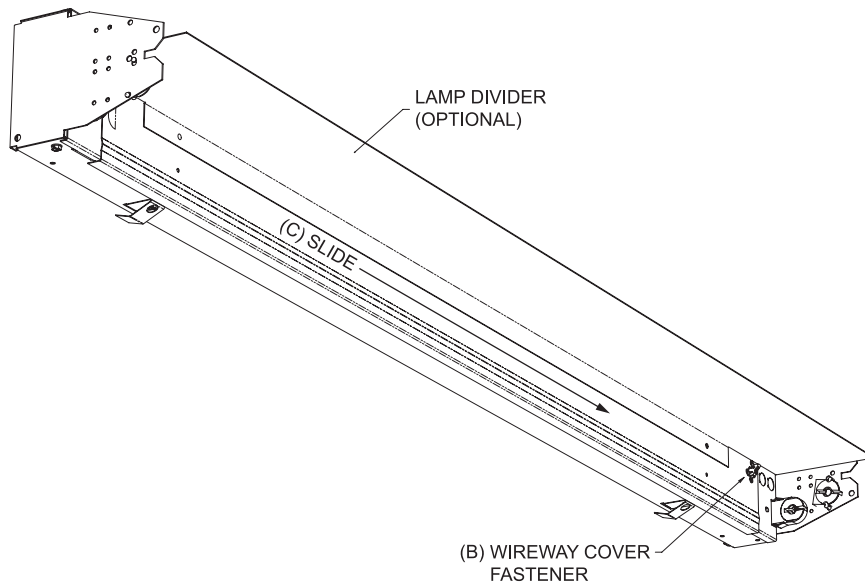


INSTALLATION INSTRUCTIONS FOR WMA SERIES


3. Mount the fixture channel to the wall using fasteners (furnished by others) appropriate for the mounting surface. Various electrical K.O.'s and mounting holes are provided for supply wire entry and mounting to the wall (refer to illustrations below).

NOTE: Fixtures equipped with the options of divided light, pull switches, and/or grounded convenience outlets must have the fixture channel oriented correctly on the wall. The end of the fixture channel with the letter "L" must be on the left side when viewing the fixture mounted to the wall.


2' FIXTURE

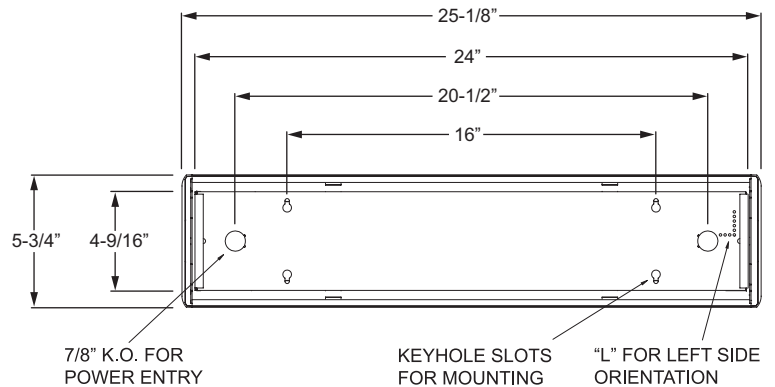

3' FIXTURE

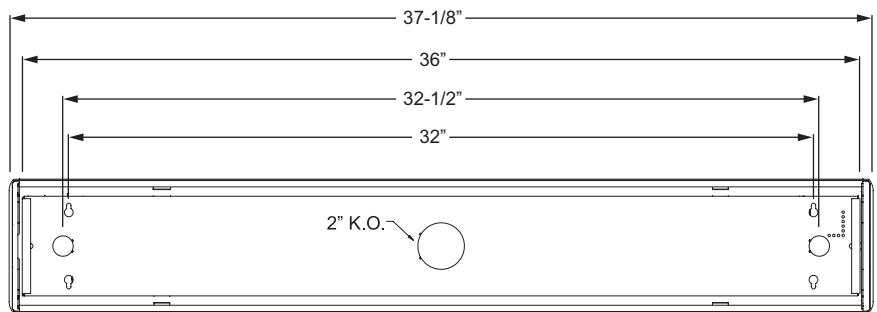

4' FIXTURE

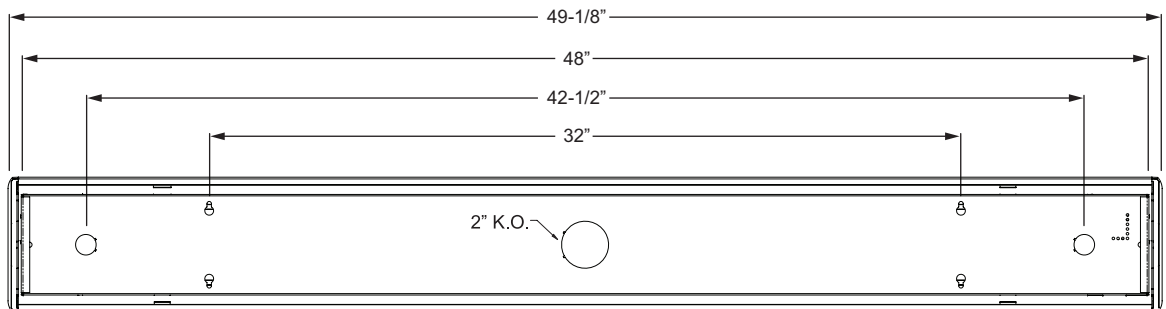

4. Make all electrical connections in accordance with NEC/CEA and all other state, city, and local codes (refer to illustrations above).
5. Install the wireway cover and the lamp divider (if applicable) that were removed in Step #2.
6. Install the lamps (furnished by others).
7. Install the front housing onto the fixture channel by grasping the end caps and snapping the assembly into the four spring mounted clips.

NOTE: For fixtures equipped with the pull switch or grounded convenience outlet, orient the cut out in the end caps to align with the device mounted in the end of the fixture channel.

